#### User manual

Manuel de l'utilisateur

Manual de usuario

Benutzerhandbuch

#### Read through this manual before use

Lisez ce manuel avant utilisation

Lea este manual antes de utilizar

Lesen Sie dieses Handbuch vor der Verwendung durch


















Ref. 19918 / 19919 / 50388




ActionSportGames® A/S Bjergvangen 1 DK-3060 Espergaerde, Denmark www.actionsportgames.com

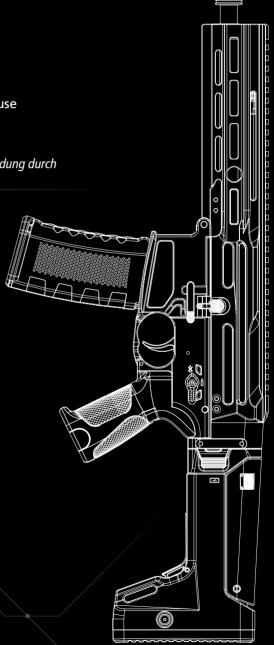

#### Safety / Sécurité / Seguridad / Sicherheit



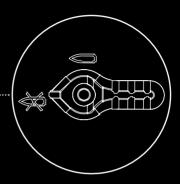


# **Loading magazine** / Approvisionnement du chargeur / Cargar el cargador / Magazin laden







#### Battery installation / Mise en place de la batterie / Instalacion de bateria / Batterieinstallation

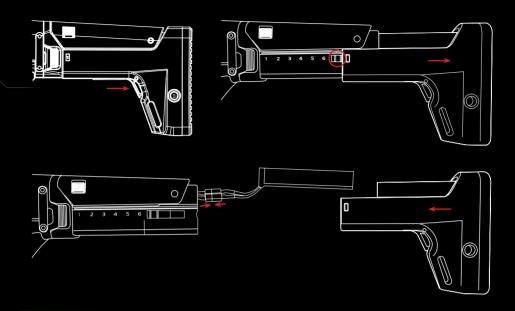


### Cheek rest / Repose-joue / Reposa mejillas / Wangenauflage

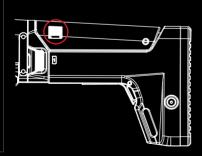


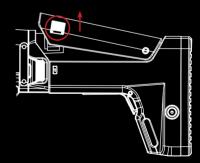

**Hop-up adjustment** / *Réglage du Hop-up / Ajuste del hop-up / Hop-Up-Einstellung* 

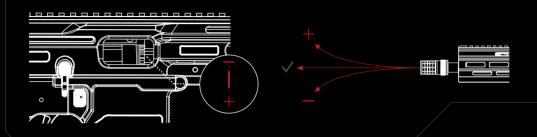

Ambidextrous charging handle / poignée de chargement ambidextre / Mango de carga ambidiestro / Beidhändiger ladegriff

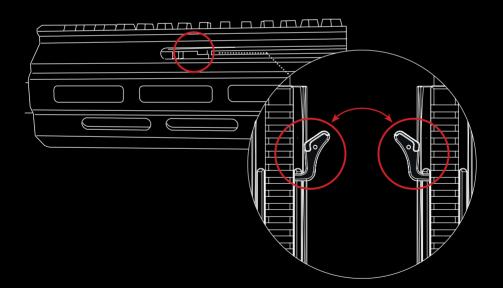

#### Warning / Avertissement / Advertencia / Achtung








#### Recommended BB weight / Poids BB recommandé / Tipo de BB recomendada / Empfohlenes BB-Gewicht



#### Overview / Aperçu / Descripción general / Überblick

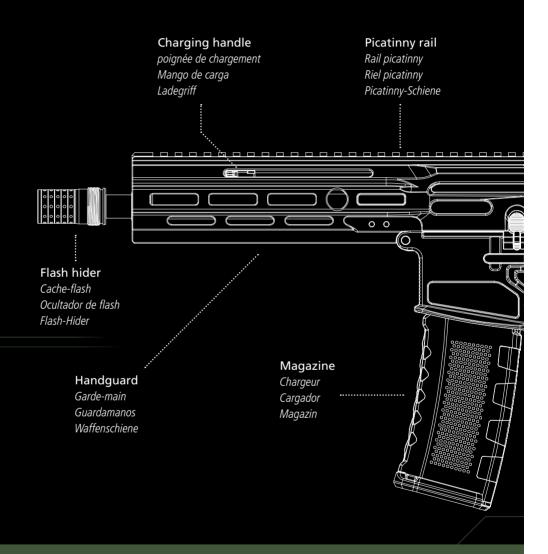

#### AIRSOFT GUN

Décret N° 99-240 du 24 mars 1999 Réglementant la vente en France. Objet ayant l'apparence d'une arme à feu. «DISTRIBUTION INTERDITE AUX MINEURS».

«ATTENTION NE JAMAIS DIRIGER LE TIR VERS UNE PERSONNE». Ce modèle factice n'est pas un jouet. A tenir à l'écart du rayon jouet. Le port de lunettes de protection est obligatoire. Avant tout usage, lire attentivement la notice incluse dans la boite. Compte tenu du réalisme de ces modèles factices, il est rappelé que la loi interdit le port de tout objet susceptible de constituer une arme dangereuse pour la sécurité publique.




#### Magazine release button

Levier de déverrouillage du chargeur Botón de liberación del cargador Knopf zur Magazinfreigabe

#### Cheek rest

Appui-joue Reposador de mejilla Wangenauflage

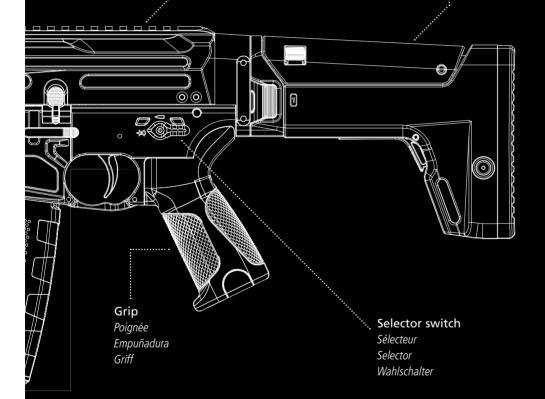

## **WARNING**



This is not a toy. Misuse may cause serious injury, especially to the eye. Eye protection designed for airsoft guns must be worn by the user and any person within range. Read the owner's manual before using.

This airsoft gun is intended for those 18 years of age or older. Adult supervision is required.

Do not change the coloration and/or markings to make it look more like a firearm. It may confuse people and/or the police and may be a crime.

Do not misuse this airsoft gun. Do not brandish or display this airsoft gun in public.

When using this airsoft gun be aware of all requirements imposed by applicable U.S. federal, state, and local laws, regulations, and administrative policies related to airsoft equipment and/or use of said equipment.

### **CAUTION**

Store the airsoft gun unloaded in a safe and proper manner, and check to see that the airsoft gun is unloaded when removed from storage or received from another person.

Treat every airsoft gun as if it is loaded.

Always wear eye protection designed for airsoft guns when handling or shooting or in range of any airsoft gun, and wear them over prescription glasses.

Keep your finger off the trigger until ready to shoot.

Never point the airsoft gun at anything you do not wish to shoot.

Keep the airsoft gun on safe until ready to shoot.

Avoid ricochet. Never shoot at a hard or flat surface or at water.

Backstops should be inspected for wear before and after each use. Discontinue use if the backstop surface shows signs of failure. Since backstop surfaces eventually fail, always place the backstop in a location that will be safe should the backstop fail. Discontinue the use of a backstop if the projectile rebounds or ricochets.

### **ADVISORY**

Perform routine inspection and maintenance, including:

- (a) Modification of the gun mechanism may cause a gun to malfunction and tampering with a gun may make it unsafe to use.
- (b) Any change in the performance, such as lowered trigger force and shortened trigger travel, indicates possible wear and that such guns should be inspected, replaced, or properly repaired, and repairs should only be made by qualified personnel.
- (c) Check any gun that has been dropped to ensure that its function has not been affected.

ActionSportGames® A/S

Bjergvangen 1 DK-3060 Espergaerde Denmark www.actionsportgames.com